

## Flexinave





döfix Wave tape



- The iron-on "K" adhesive eliminates the need to pin the tape to the fabric.
- Once it is ironed on, the tape can be easily sewn-on. The spacing between the pins can be individually selected to match a repeat
- in the fabric.
- The extraordinary springiness of the *Flexiwave* tape assures perfect and even • waves.
- Easy fabrication. Curtain pins can be inserted at the markers for a standard
  - fullness of 1.5 : 1 or 2.0 : 1. Wave cord in *Click* Technology allows for an effortless installation. Glides can
- be inserted into the track at any position. • Wave curtains made with the döfix *Flexiwave* system can be washed and
  - dry-cleaned like a regular drapery.

4mm

6mm

- Available with a glide spacing of 6 cm for 2.0 : 1 fullness and 8 cm spacing for Two styles of glides to fit tracks with a channel of 4 mm (döfix tracks) and for • 1.5 : 1 fullness.
- tracks with a 6 mm channel.

Wave cord *FlexiClick* is available with a glide spacing of 6 cm and 8 cm for tracks with a channel of 4 mm (döfix tracks) and for tracks with a 6 mm channel.



 Chick Cuicking

 Nave cord in

 Chick Technology

 allows for an

 extremely


 effortless

 installation.




variable or according to the woven-in markers.


Wave cord *FlexiClick* with glides spaced 6 cm Insert the curtain pins into the marked pockets of the Flexiwave tape: Fullness: 2 : 1



Wave cord *FlexiClick* with glides spaced 8 cm Insert the curtain pins into the marked pockets of the Flexiwave tape: Fullness: 1.5 : 1





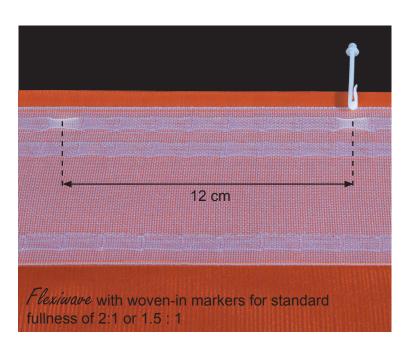



## Flexinave

