
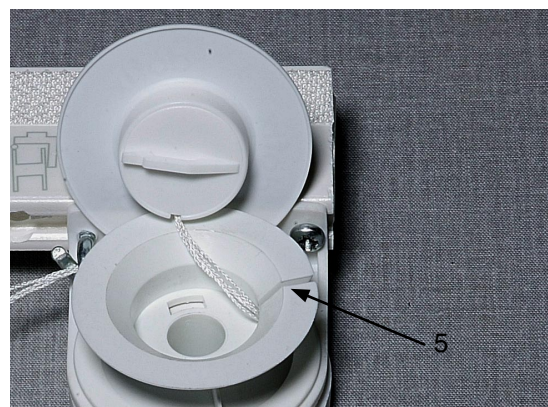
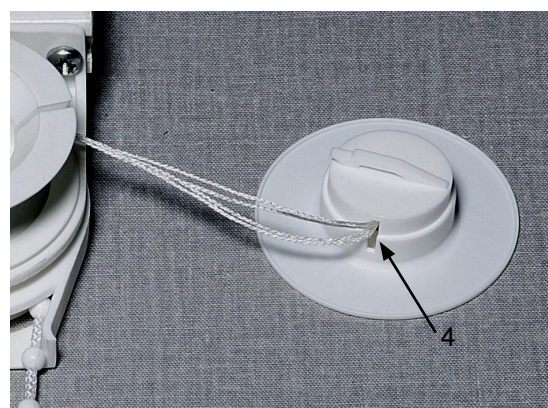
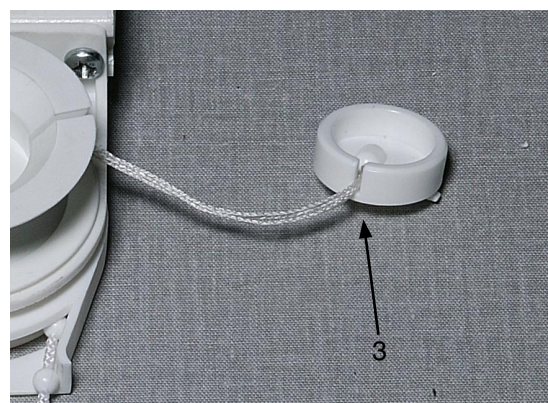


Instructions:


- Cut mountboard RUS to size.
- Insert döfix rollers into the channel of the mountboard, slide to position and fasten them with the screws. (Skip this step when using döfix RTB, horizontal guide tape)
- Slide the shade clutch into the channel of the mountboard and fasten it with a screw (1).
- To minimize uneven pull up of the shade, it is recommended to use döfix specialty pullcords for the shade clutch item Nr. 500221 - 500229.
- Snap all pullcords into the rollers (or thread them through the pullcord guides for RTB) and thread them through the screw eye (2).
- Cut all pullcords to size, perhaps melt the ends together using a lighter and tie them off. Allow a maximum of 5/8" (1.5 cm) between edge of mountboard and the knot. (See illustration above). In order to keep all pullcords perfectly even in length it is recommended to use döfix pullcord attachments clips, item Nr. 500611.
- Turn the cord spool of the clutch so that the slot faces towards 3 o'clock.
- Place the knot through the slot into the small lid (3).
- Align the slots of the small and the large lid and snap the small lid into the large lid (4).
- Place the pullcords into the slot of the cord spool and insert the large lid into the cord spool (5).

When using a chain with a lock (not continuous), make sure the lock is located at the cord spool before inserting the lid into the cord spool.

If the distance between the first pullcord and the clutch is less than 2 3/4" (7cm), thread the pullcord directly through the screw eye without using a roller.

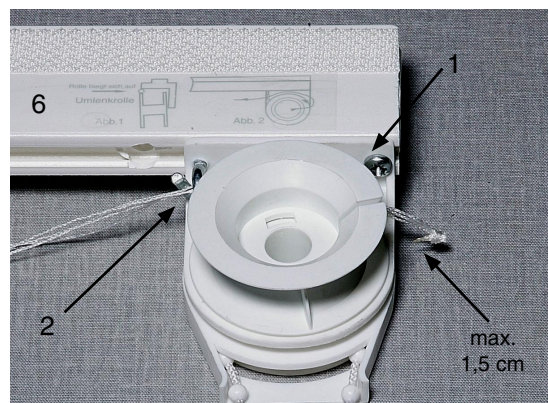

Instructions: döfix Pullcord attachment clip

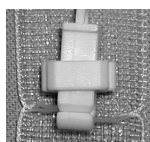


1. Fray check the ends of the pullcord by melting the ends over a flame.

2. Slide the sleeve onto the attachment clip.



5. Feed the pullcord through the hole of the attachment clip.

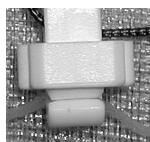

Indicators point sideways for thicker pullcords.

Important:

When turning the sleeve 90° it can be used with various sizes of pullcord. For thicker pullcords turn the sleeve so that the indicators are pointing sideways.

3. Hook the attachment clip into the loop of the shade tape.



4. Feed the pullcord through the eyelet of the attachment clip.



To achieve maximum grip when using 0,03mm pullcord, thread the pullcord twice through the eyelet and the hole in the pullcord attachment clip.

6. Slide the sleeve up to lock the pullcord.