

Instructions:
Mitered corner with döfix Bortenfix

döfix No Sew
1947 Ironway Dr.
Sanford, MI 48657
800-962-8983
www.dofix.com



döfix Bortenfix 3/8" ideal for:

Miters

Bias banding

Banding

Wrap around banding

Hems


Trims

Pillow case hems

and much more...




Fold and crease banding. Apply a strip of döfix Bortenfix 3/8" along each side.

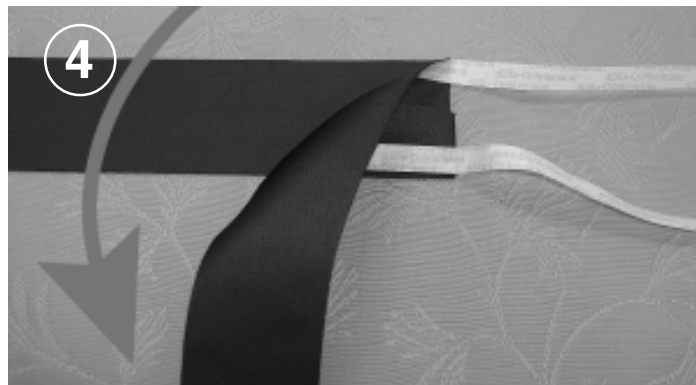


Fold the miter as shown. Do not peel the paper off the Bortenfix yet




Fold the band and iron in a crease.

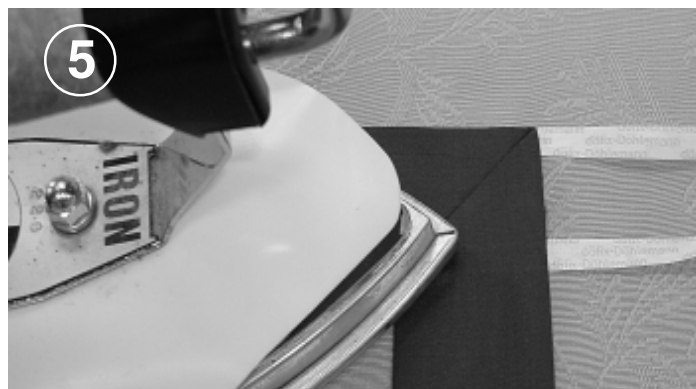

Crease the miter with the iron, peel the paper off the Bortenfix and iron it down.

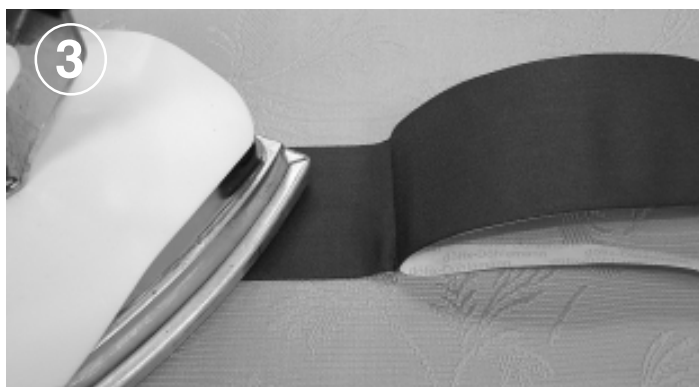

Peel the paper off the Bortenfix tape right to the crease. Iron down this section of the band.

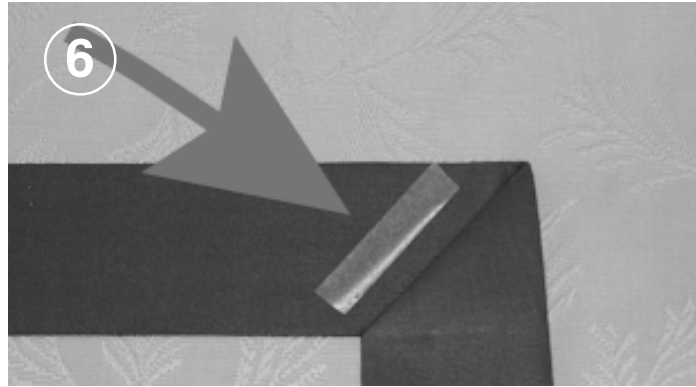

Peel the paper off a piece of Bortenfix tape, slide it into the opening and iron it down.