

Product information: döfix mountboard RPS

The döfix RPS is a flexible mountboard covered with hook fastener which can be used for the installation of almost any kind of window treatment including shades, valances and headboards. Because of its flexibility, it can be used for any shape of window, such as **Bay or Bow windows, Arches, Octagons or Circles.**

Cord rollers, a unique 4 direction cord lock and a shade clutch system are also available. The rollers, the lock and the clutch slide into the groove of the mountboard, and are fastened with small screws.

To install the mountboard, just screw right through it in either direction. Horizontally for outside mount, or vertically for inside mount. Then simply attach the window treatment using hook and loop fastener.


Shaping the RPS is just as easy: Soften the mountboard by steaming it with a steam iron, drapery steamer or a hot air blower. The more you heat up the RPS, the softer it becomes and the easier it is to bend. To achieve the best results, it is recommended to draw a template on a sheet of plywood. Using drywall screws, attach the RPS to the plywood, right along the template. When the complete arch is attached to the plywood, heat up the RPS so that it will stay in a round shape. To make a sunburst frame, attach a wooden board to the bottom of the arch as shown.

For making arches with a radius of approximately 14" or less it is recommended that it be bend in two steps:

- First you bend a larger arch than needed, using the plywood method and heat it up, to pre-shape the RPS.
 - After the RPS is formed into the larger shape, you repeat step 1 to form the required arch.
- Since the RPS was pre-shaped it is easier to bend to a narrow curve.




RPS mountboard
and rollers used in
an arched window

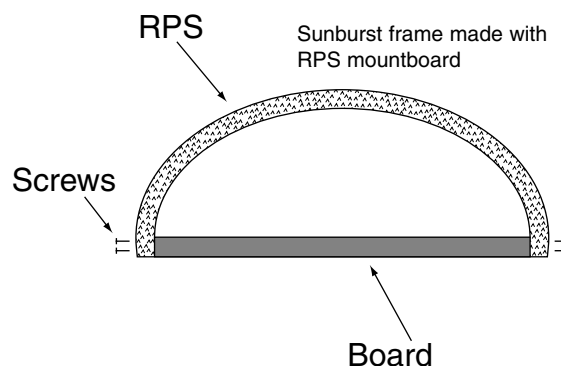


The döfix mountboard RPS is available in 98.5" lengths. A shipping unit consists of 10 pieces.

Instructions: döfix cordlock


Cordlock

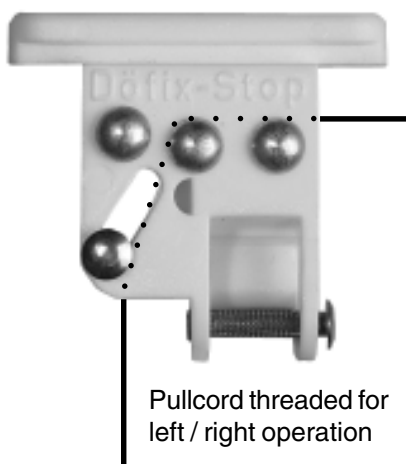

Cordlock

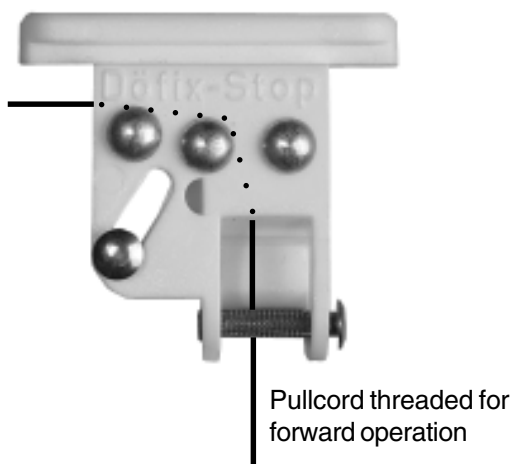

- Cut mountboard RPS to size.
- Insert döfix rollers into the channel of the mountboard, slide to position and fasten them with the screws.
- Cut extended tab on cordlock. (See illustration)
- Slide the cordlock into the channel of the mountboard and fasten it with one screw.
- Snap all pullcords into the Rollers and thread them through the Cordlock.
- Cut pullcords to size and tie off. Tie off both ends of finishing cord, enclosing all knots within the Cord connectors.

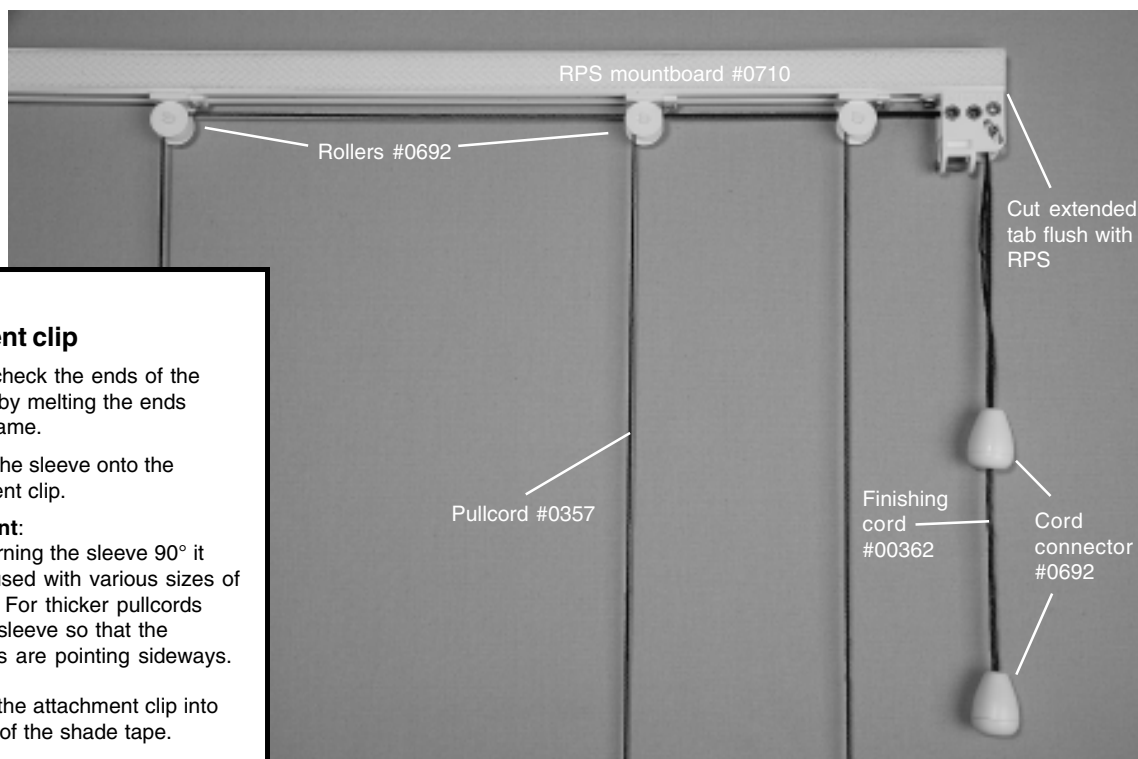

Instructions: döfix Pullcord attachment clip



1. Fray check the ends of the pullcord by melting the ends over a flame.
2. Slide the sleeve onto the attachment clip.

Important:

When turning the sleeve 90° it can be used with various sizes of pullcord. For thicker pullcords turn the sleeve so that the indicators are pointing sideways.



Indicators point sideways for thicker pullcords.

3. Hook the attachment clip into the loop of the shade tape.
4. Feed the pullcord through the eyelet of the attachment clip.



5. Feed the pullcord through the hole of the attachment clip.
6. Slide the sleeve up to lock the pullcord.