

döfix

RHD tape for double sided Romans

- Pullcords are hidden between two layers of fabric for a neat look from the outside.
- Iron-on technique assures uncomplicated and clean fabrication
- No stitch-marks or light holes
- Perfect for room dividers, too



Call 800-962-8983
for samples and more
information



ENHANCING CUSTOM WINDOW TREATMENTS

www.dofix.com

döfix No Sew
1947 Ironway Dr.
Sanford, MI 48657
Ph. 800-962-8983; 989-687-7999
Fax: 877-687-7220; 989-687-7220
Web: <http://www.dofix.com>



Fabricating instructions: döfix double sided flat Roman shades RHD

döfix products recommended:

040602 2014 iron-on lining
080810 Bortenfix hemming tape 3/8"
080815 Bortenfix hemming tape 5/8"
201621 RHD shade tape
060204 Iron-on loop fastener, PA-loop
400060 RUS mountboard

Fabric requirements:

Width: Finished width of the shade
+ allowance for side hems
Length: Finished length of the shade
+ allowance for weightbar pocket
+ allowance for header

Cutting the lining:

Width: Finished width of the shade
+ allowance for side hems
Length: Finished length of the shade
+ allowance for header

1. Preshrink decorative fabric by steaming it thoroughly.

Apply 3/8" Bortenfix along both sides leaving the finished width of the shade between the tapes.

Optional for added body: Before placing the Bortenfix tapes, iron döfix 2014 iron-on lining (cut to the finished width of the shade) square to the pattern onto the back of the face fabric.

2. Using a straight edge, square and disappearing ink pen, draw the layout of the RHD tapes onto the back of the face fabric.

3. Trim the sides of the face fabric along the Bortenfix tapes.

4. Iron döfix RHD tapes horizontally across the back of the face fabric.

5. Fold and crease a single side hem by turning the Bortenfix tape over. Once the crease is ironed in, peel the paper off the Bortenfix tape and iron down the side hem.

6. Apply 5/8" Bortenfix tapes on top of the RHD tapes.

7. String the shade through the loops of the RHD tapes.

Tie the strings to the last row of RHD tape.

8. Peel the paper off the Bortenfix tapes.

9. Hem the sides of the lining using 3/8" Bortenfix.

Place the lining onto the back of the shade. The lining should be covering the last row of RHD tape.

10. Fold and crease a 3/8" hem into the face fabric along the bottom.

Place a 3/8" Bortenfix on the hem.

Fold and crease a pocket for the weightbar. Assure that the pocket will cover the raw edge of the lining.

Peel the paper off the Bortenfix tape and iron down the pocket.






Iron across the RHD tapes to make the lining adhere to the tapes.

11. Fold and crease a 3/8" header into the face fabric along the top of the face fabric.

Place a 1 1/8" PA Loop strip on top of the header and iron it down. The PA Loop tape will hold down the header.

Finish the top of the lining in the same way.

Attach the shade to a RUS mountboard using the PA Loop tapes on the face fabric and the lining.

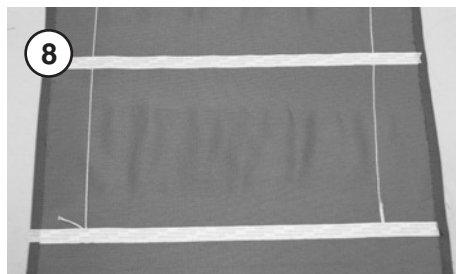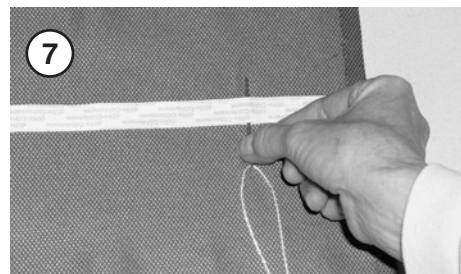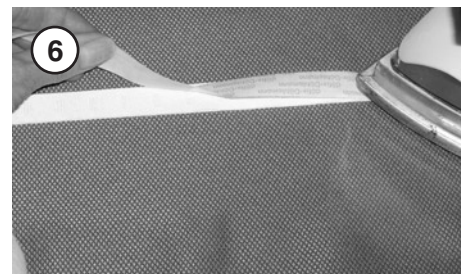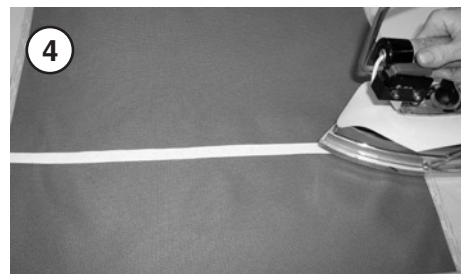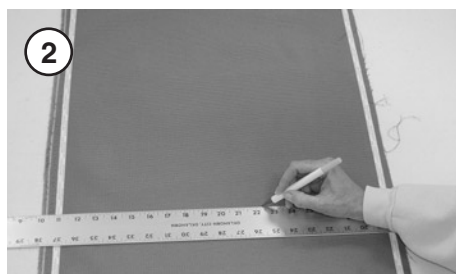

döfix No Sew, Inc.
1947 Ironway Dr., Sanford, MI 48657
Phone: 989-687-7999, 800-962-8983
Fax: 989-687-7220, 877-687-7220

