

döfix

1/2" iron-on batting

1

2

3

Perfect for:

- Upholstered cornices
- Soft cornices
- Pillows and pillow shams
- Custom headboards
- Lambrequins
- Quilting
- Window seats
- Slip covers

- ① döfix fabric stiffener for soft cornices.
- ② döfix 1/2" iron-on, strong bonding batting.
- ③ decorative fabric.

Call 800-962-8983
for your free sample



ENHANCING CUSTOM WINDOW TREATMENTS

www.dofix.com

döfix No Sew
1947 Ironway Dr.
Sanford, MI 48657
Ph. 800-962-8983; 989-687-7999
Fax: 877-687-7220; 989-687-7220
Web: <http://www.dofix.com>

döfix
No Sew USA

Fabricating instructions: Soft cornice with döfix iron-on batting

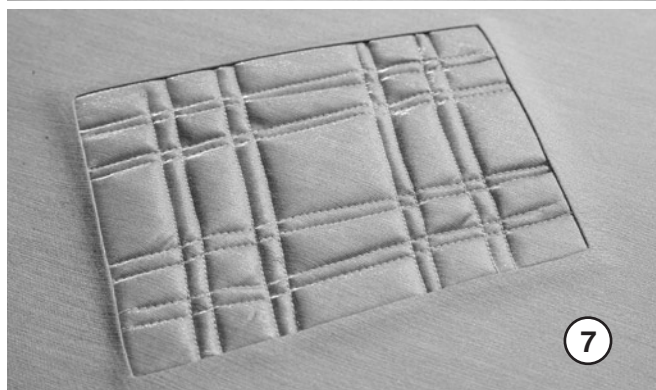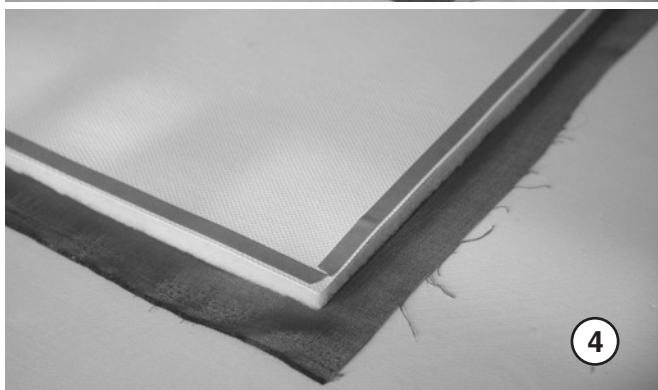

döfix products recommended:

- 022800 döfix iron-on batting
fabric stiffener 2001 or 2005
- 080210 k/do pressure sensitive, double sided "peel and stick" tape
- 080418 Iron on gimp 5/8"

1. Preshrink decorative fabric by steaming it thoroughly. Place the fabric onto the face side (coated side) of the batting and iron it down. Apply only light pressure to keep the batting from flattening out.

2. If desired, quilt through both layers.

3. Place the stiffener onto the back of the batting and iron it down. Leave approximately 1" of fabric around for hems.

4. Apply 3/8" k/do tape along all edges of the stiffener.

5. Peel the paper of the k/do tape. Turn hems, sticking them on the k/do tape.

6. Iron 5/8" iron-on gimp over the raw edges to finish the back side. Iron a strip of PA loop fastener along the top edge for mounting.

7. Picture shows a quilted insert in a double layer soft cornice made with 2002 fabric stiffener.

döfix No Sew, Inc.
1947 Ironway Dr., Sanford, MI 48657
Phone: 989-687-7999, 800-962-8983
Fax: 989-687-7220, 877-687-7220
web: www.dofix.com

