

Instructions döfix stackable shade with AL2





döfix No Sew, Inc.
1947 Ironway Dr.
Sanford, MI 48657
800-962-8983
www.dofix.com



- Preshrink fabric and lining by steaming it thoroughly.
- **To fabricate the sections of the face fabric:**
Place the pre-cut döfix iron-on lining 2014 square to the pattern onto the back of the face fabric sections. Leave at least 2" on each side for side hems and steam down. Start in the center and work out to the edges. Make sure there is absolutely no tension.
- For a double 1" hem, mark a 2" allowance for side hems onto the fabric along each side of the lining. Trim face fabric along the lines
- Fold and crease the 2" side hem allowance in half (aligning the raw edge of the hem allowance to the edge of the lining).
- Iron a strip of Bortenfix hemming tape 3/8" along the crease. Now fold and crease the remaining inch of the side hem allowance at the edge of the lining. Remove the paper of the Bortenfix tape and iron the side hem down.
Repeat on the other side and the bottom part of the section.
- Fold, crease and iron a strip of PA loop fastener (1) along the top edge of the section.
- **To fabricate the lining:**
Using a straight edge, square and disappearing ink pen, mark horizontal lines on the lining. It is important that the lines are square to the sides and parallel to each other. The spacing (A) between the lines will determine the overlap of the face fabric sections when the shade is down.
- Iron a strip of PA loop fastener (1) along each line.
- Finish the side hems and weightbar pocket (B) with 3/8" hemming tape (see above).
- Fold, crease and iron a strip of PA loop fastener (1) along the top edge of the lining.
- Cut the aluminum slats AL2 (2) to the finished width of the shade. It is important that the holes in the slats are lined up!!!
- Attach aluminum slats AL2 (2) to the lining using the hook and loop fastener.
- String the shade through the holes in the AL2 slats.
- Attach the sections of the face fabric to the opposite side of the AL2 slats.
- Attach the top of the first face fabric section and the top of the lining to the mountboard.

Note:

The overlap of the sections when the shade is up is determined by the size of the AL2 slats. If a different overlap is desired (to show a certain part of a pattern in the face fabric) spacers (3) (for example aluminum tubing) can be placed between the AL2 slats.

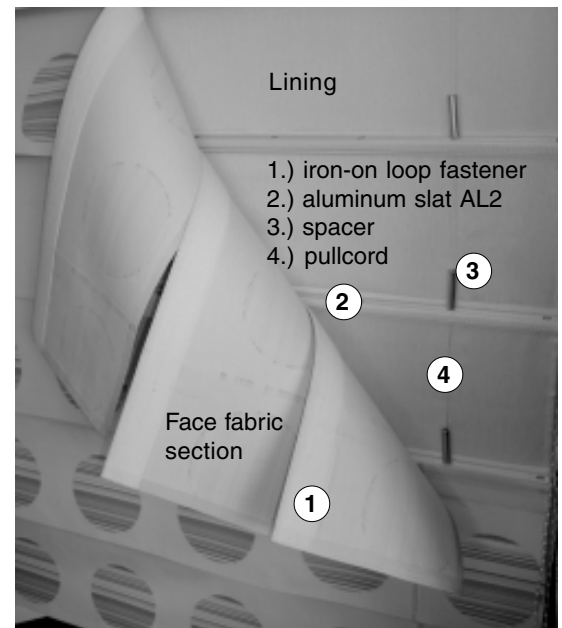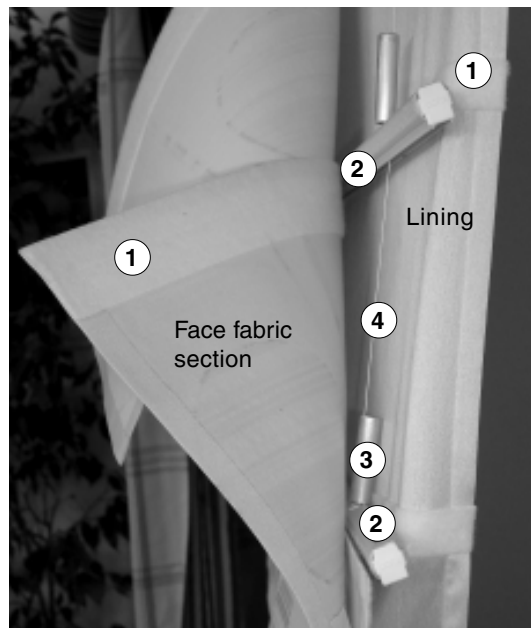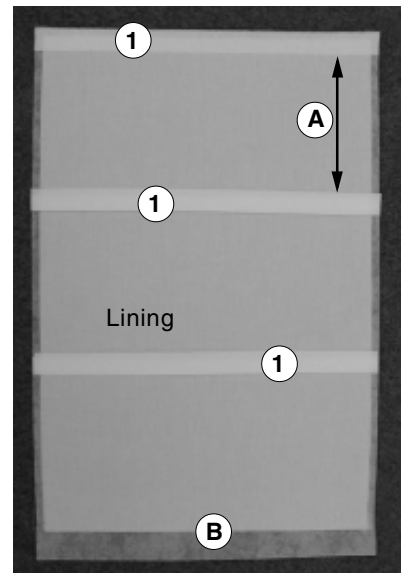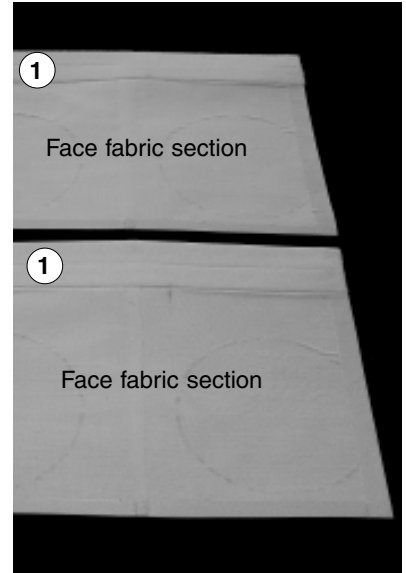

Lining

- 1.) iron-on loop fastener
- 2.) aluminum slat AL2
- 3.) spacer
- 4.) pullcord

Face fabric section

Face fabric section